

## How to Make Schedule Backup History Video in IVMS-4200

**Note:** As we all know, we can add Hybird SAN into IVMS-4200 and configure recording schedule for each camera. This manual will show you how to do it and points for attention. The version of IVMS-4200 is v2.7.2.4 which supports to make schedule backup history video template.

IVMS-4200 download Link: https://www.hikvision.com/en/Support/Downloads/Client-Software

## Steps

**1.** You need to insert the hard driver before configuring device. And the disk should be installed in right position as follow pictures.





## Wrong Installation

**Correct Installation** 

**2.** The status of disk is **unauthorized** when you insert new disk into device.so you need to check or detect it. The status of disk will be **Normal** after checking or detectin

<b>KVISIO</b>	N <sub>DS</sub>	-A manag	ement		* + * +	K	200	
	Storage	-> HDD Mana	agement					
anagement		atus (To	Rescan	Sleep Status				
Rool		Position	Supplier	Model	Capacity (MB)	State	Group	HDD Status
		0/0-2	WD	WD60PURX-64LZMY0.WD-WX31	5,723,166	Normal	Array (RAID5)	View
ration		0/0-3	WD	WD40PURX-64GVNY0.WD-WCC4	3,815,447	Normal	Array (RAID5)	View
		0/0-4	WD	WD40PURX-64GVNY0.WD-WCC4	3,815,447	Normal	Array (RAID5)	View
agement		0/0-5	Seagate	ST4000VX000-1F41.Z303ZYY	3,815,447	Normal	Array (RAID5)	View
		0/0-6	WD	WD40PURX-64GVNY0.WD-WCC4	3,815,447	Normal	Global Hot Spare Disk	View
m lelp		n 🚺 Initia	lize Deter	å				
tion (Total: 4)								
Position	Su	pplier		Model C	Capacity (MB)	State	Group	HDD Status
0/0-10	Se	agate	ST3	30065755.6539A1KT0000	286,102	Normal	Storage Pool	Mew
0/0-14	Se	agate	ST3	30065755.65J9A1K30000	286,102	Normal	Storage Pool	View
0/0-18	Se	agate	ST3	3006575S.6SJ9A3L70000	286,102	Normal	Storage Pool	View
	KVISIO	KVISION DS. ICC Storage HDD SI HDD Inf HDD	KVISION DS-A manage inagement a Pool ration ngement N M M M M M M M M M M M M M		Constraint         DS-A management           Incomposition         Storage-> HDD Management           Incomposition         IND Status         Rescas         Steep Status           Incomposition         IND Information         (Total: S)         Model           Incomposition         0/0-2         WD         WD60PURX-64GWN0.WD-WX31           Incomposition         0/0-3         WD         WD40PURX-64GWN0.WD-WX42           Incomposition         0/0-4         WD         WD40PURX-64GWN0.WD-WX24           Incomposition         0/0-5         Seagate         ST4000VX000-IF41.23032YN           Incomposition         Innitialize         Innitialize         Innitialize           Incomposition         Innitialize         Innitialize         Innitialize           Incomposition         Seagate         ST33006575.6539A11X10000         Innitialize           Incomposition         Seagate         ST33006575.6539A1X10000         Innitialize           Incomposition         Seagate         ST33006575.6539A1X10000         Innitialize           Incomposition         Seagate         ST33006575.6539A1X10000         Innitialize	Constraint         Storage-> HIDD Management           Intragement         HDD Status         Resca           Pool         Position         Sueps Status           Intragement         0/0-2         WD           0/0-2         WD         WD60PURX-64L2MY0.WD-WX31         5,723,166           0/0-3         WD         WD40PURX-64L2MY0.WD-WX31         5,723,166           0/0-4         WD         WD40PURX-64L2MY0.WD-WCC4         3,815,447           0/0-5         Seagate         ST4000VX000-FWC4         3,815,447           0/0-6         WD         WD40PURX-64GVNY0.WD-WCC4         3,815,447           0/0-1         Seagate         ST330065755.6539AL170000         286,102           0/0-14         Seagate         ST330065755.6539AL170000         286,102           0/0-18         Seagate <td>DS-A management         Interpretation of the segment         Interpretation of the segment     <!--</td--><td>S-A management         Interpretation of the seage of</td></td>	DS-A management         Interpretation of the segment         Interpretation of the segment </td <td>S-A management         Interpretation of the seage of</td>	S-A management         Interpretation of the seage of

**3.** Add Hybird SAN device into IVMS-4200 in device management interface. You need to input IP address, user name and password.



le System View Tool Help		📥 iVMS-4200	
Control Panel 🔛 Main V	w 🥽 Storage Schedule	Device Management	
Device 🖬 Group			
Device Type	Device for Management (2)		
Histision Device	🕈 Add 🖾 Modify 🗙 Delete 🗇	Remote Configuration III: QR Code 🌻 Activate 📼 Device	status 🤅
🚪 Upgrade Server		Modify	
Stream Media Server Add New Device Type	Adding Mode:		
	IP/Domain     IP Segme     IP Server     HiDDNS	ent Hik-Connect D EHome Seria	Port
	Nickname:	Hybird SAN	
	Address:	10.5.8.223	
	Port	8000	
	User Name	admin	
	Password:	••••••	
Hitvision Device: Encoding Device/Door			
Station/Decoder/Storage Server/Indoor Station/Master Station/Security Control Panel/Access Controller		Modify	Cancel

4. Click Remote Configuration, And you will enter configuration interface. In the storage interface, Click General, and just click One-touch Config which will start to automatically configure Hybird SAN service. When the one-touch config finish, the status of hybrid san will be Working.

File System View Tool Help	🙋 iVMS-4200
📲 Control Panel 🛃 Main V	iew 🚓 Storage Schedule 💆 Device Management
🚾 Device 🖬 Group	
Device Type	Device for Management (1)
Hikvision Device	🕂 Add 🗹 Modify 💥 Delete 🔯 Remote Configuration 🎉 QR Code 🌻 Activate 📼 Device Status 🚱 Configuration
🚪 Upgrade Server	Device Type   Nickname   Connectio   Network Paramet   Device Serial No.
Stream Media Server	Storage Server Hybird SAN TCP/IP 10.5.8.223:8000 651772114
+ Add New Device Type	

			Ren	note Configuratior	)					×	
	🗄 🚳 System	Conf	iguring the HDD Pa	arameters							
	🗄 🚳 Network – 🍘 Storage		IDD No.   Capacity(GB)	Free Space(GB)	Status	Туре	HDD Group	Property	Overwrite	e  '	
	😫 General		279.40	279.40 I 279.40 I 279.40 I	Normal Normal Normal	Local Local	Group00 Group00	Read/Write Read/Write	No		
	= 🗞 Event	5	279.40	279.40 1	Normal	Local	Group00	Read/Write	No		
	w Uploading Execution 한 🚳 Heat Map	n Plan Con	Modify ne-touch Config Sar	Format Configuration	Update	N+1 Co	onfiguration				
		Progr	ess:						0%		
HIKVISI	ON DS-A manager	nent	· + ++ +		K					-1	► Except
Maintenance Storage SAN Management NAS	Hybrid SAN -> Hybrid Hybrid SAN Service Stat Hybrid SAN System Login	SAN us: Working Pause	Hybrid SAN Service				One-Key Cor	figuration	onfigure Hybri	d SAN Backup a	nd Restore
Hybrid SAN * Hybrid SAN	Record Volume			<b>Z</b> - 1000		5 (110)		Tota	1 page(s), 2	2 row(s). 20 per	page, pa
* N+1	0	video	1/1	7999388	14605	7984783	30	on Time	Overwrite	Usage Video Storage	
System Log System	1	Hunter	1/1	999922	0	999922	0		Overwrite	Picture Storage	ŬØ
2 Use Help	LUN Information	LUN ID	Total(MB)	Blo	ck Size(Byte)			Total	l page(s), 10 Usage	) row(s). 20 per	page, pag
Logout	NAS_lun1	0	102,400	010	512				iSCSI		
	NAS hun?	1	102.400		512				icost		

5. After one-touch configuration, you can start to make recording schedule in **storage schedule** interface.



Choose the camera in left bar which you want to make recording schedule. And then choose **storage server** and **related HDD**. Finally, The recording schedule should be **empty** template.

File System View Tool Help			ivms-4	200	
📲 Control Panel 🔝 Ma	in View 📻 Storage	Schedule 🚽 📑 Device	e Management		
Camera Search	Storage Schedule Storage of Encoding Se Capture Schedule: Capture Schedule: Storage Server Storage Server: Related HDD No: Storage Content Storage Quota:	All-day Template	Edit Advanc Edit Advanc Storage Server Mar Template 01 Storing the alarm pid age Set Quota %	ced Settings ced Settings nagement Edit	Advanced Settings

	-					Templa	ates I	Manag	ement									×
<ul> <li>All-day Template</li> </ul>	Con	tinuous	2	Event R	ecordin		Соп	nmano	1 2									
<ul> <li>Weekday Template</li> </ul>		0	2	4	6			10	12	14	16	19	20	22	24			
<ul> <li>Event Template</li> </ul>	Mon	Ě	f	. 7	, ř	. ï	1	10				10	20					
Template 01	Tue	<u> </u>	2	4	6	8		10	12	. 14	16	18	20	22	24			
Template 02		0	2	4	6	8		10	12	14	16	18	20	22	24			
Template 03	vved																	
Template 04	Thu	Ê	2	4	6	8	1	10	12	14	16	18	20	22	24			
Template 05	Fri	0	2	4	6	8		10	12	, 14	16	18	20	22	24			
Template 06		0	2	4	6	8		10	12	14	16	18	20	22	24			
Template 07	Sat																	
Template 08	Sun	ů –	2	4	6	. 8	-	10	12	14	16	18	20	22	24			
															ОК	c	ancel	

**6.** After configuring empty template schedule. Click **Remote configuration** in the device management.

File System View Tool Help		iVMS-4200	
Control Panel 💭 Main Vie	w Storage Schedule	Device Management	
Device 🖬 Group			
Device Type	Device for Management (2)		
Hikvision Device	🕂 Add 🗹 Modify 🗶 Delete	Remote Configuration 🗱 QR Code 🔮 Activate 📼 Device Status	🚱 Configuration on Device  🏦 U
🚪 Upgrade Server	Device Type Nickname	Connectio   Network Paramet   Device Serial No.	Security
Stream Media Server	Storage Server Hybird SAN	TCP/IP 10.5.8.223:8000 651772114	Strong



7. And Click Uploading Historical Record in Event option, you can set which certain period of video you want to backup. In this case, make a backup schedule for this camera is that from 8 am to 6 pm. But you also can make an all-day template for it. So it depends on project requirements.

	Remote Configuration ×	pri al
🖃 🗞 System	History Video Uploading Schedule	F
Device Information	Camera: IP Camera7	
🎡 General		
🎡 Time	Enable Uploading Plan of Historical Video	
System Maintenance	Time of Historical Vi All-day Template v	
🎡 Log	Save	
🎡 User		
🖭 🚳 Network		
🖭 🚳 Storage		
🖃 🚳 Event		
Schedule		
🎡 Video Uploading		Ë,
🔅 History Video Uploading		
Uploading Schedule Exec		1
		F





Click **Uploading Execution Plan Configuration**, you can set when you want to start to backup video from NVR/DVR/IPC. In this case, make execution plan from 0 am to 8 am and from 6 pm from to 24 pm. You can set all-day template for it as well if necessary.

	Remote Configuration	al al
Construction     C	Uploading Schedule Execution Camera: IP Camera?   Camera IP Camera?  Camera Video Uploading Schedule  Upload by Week Video Uploading Sch All-day Template	Edit         All-day Template         Veekday Temp         Template01         Template02         Template02         Template03         Template04         Template05         Template06         Template07         Sat       0       2       4       9       8       10       12       14       16       18       20       2       2         Fri       0       2       4       9       8       10       12       14       16       18       20       2 </th
۵		Save Cancel

9. Then login hybrid san system to check the status of upload.

mation	Preview and R	ecord -> Encoding	g Device								
ding Device	Turn on All Tu	um off all									
iew and Record	Encoding Devic	e							Total 1 page(s), 4	row(s). 20 per	page, pag
coding Device	Display All	Filter				Show E	Enabled Encoding	Device V T	urn on videos	Turn off videos	Live V
egy and Alarm			URL				Record			Sel	
nload and play	Name	Туре	IP Address	Port No.	Channel No.	Use Name	Property	Volume	Stream Type	Status	
Management	4	Hikvision	10.9.96.15	8000	33	admin	ETPU	video	Main Stream	Free	
em Config	5	Hikvision	10.9.96.15	8000	34	admin	ETPU	video	Main Stream	Free	
Aanagement	6	Hikvision	10.9.96.15	8000	35	admin	ETPU	video	Main Stream	sync	
	7	Hikvision	10.9.96.15	8000	36	admin	ETPU	video	Main Stream	sync	

HIKVISIO	DS-A mar	nagement		+ + . + .	•••		2018-08-23 Th	ursday 12: 11: 51			
Information	Download and p	olay -> Search Video									
Encoding Device Preview and Record	Search Video     Total 1 page(s), 1 row(s), 20 per page, page 1     Search Video     Total 2 page(s), 1 row(s), 20 per page, page 1     Search Video     Total 2 page(s), 1 row(s), 20 per page, page 1     Search Video										
Strategy and Alarm Download and play	Encoding Device	Start Time	End Time	Duration	Video Type	Video Size (MB)	Lock Duration	Quick Connection	Select (0)		
* Search Video	7	2018-08-07 12:14:52	2018-08-07 13:39:40	01:24:48	Upload Video	913.0		4些			
User Management											



First Choice for Security Professionals

**HIKVISION** Technical Support