

Инструкция по подключению домофона

в p2p сервис Hik-connect

(Перед добавлением необходимо зарегистрироваться в личном кабинете)

В ПО добавляется сам домофон (внутренний блок, исключение - DS-КВ6003-WIP)

Прошивки домофонов — 1.5.1 или выше

1. Прежде всего настройте сеть на устройстве (IP, маска, шлюз, DNS)

	🗞 System	Configuring the Local Network Pa	ameters
	② Device Information	Local Network Configuration	
	🎡 General	_	
	Time	Local IP Addres	172.16.2.41
	System Maintenance	IP Address Subnet Mas	c 255.255.255.0
	📾 User	Default Gatewa	/: 172.16.2.1
	@ R\$485	Po	t 8000
	a Intercom	HTTP Po	t 80
	Network		Save
	A Local Network Configuration		
	Linked Network Configuration		
	Advanced Settings		
	gg farmer settings		
		Remote Configurat	on
8	System	Remote Configurat	on Settings
8	System	Remote Configurat	on Settings
8	System	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 88.8.8	on Settings
8	System Device Information General	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8.8 DNS2 IP Address: 114.114.114.114.	on Settings
© () () () ()	System @ Device Information @ General @ Time	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114.114.114.114 Save	on Settings
© © ; ; ;	System System Second Enformation General Time System Maintenance	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114.114.114 Save	on Settings
Solution	System System Sevice Information General Time System Maintenance System Maintenance	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8.8 DNS2 IP Address: 114 114.114.114 Save	on Settings
	System System Sevice Information General Time System Maintenance User System Sass System Sass	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 88.8.8 DNS2 IP Address: 114.114.114.114.114. Save	on Settings
	System System Sevice Information General Time System Maintenance User S485 Intercom	Remote Configural Configuring the Advanced Network DNS1 IP Address: 8.8.8.8 DNS2 IP Address: 114.114.114.114 Save	on Settings
	System Device Information General Time Time System Maintenance System Maintenance User Sk485 Intercom Network	Remote Configuration	on Settings
	System System Solution General System Maintenance System Maintenance System Maintenance Soluter Ref485 Intercom Network Local Network Configuration	Remote Configuration Configuring the Advanced Network DNS1 IP Address: 8.8.8.8 DNS2 IP Address: 114.114.114.114.114 Save	on Settings
	System System Solution Solutio	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114 114 114 114 Save	on
	System System System Second Se	Remote Configural Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114.114.114.114 Save	on Settings
	System System Solution Solutio	Remote Configuration Configuring the Advanced Network DNS1 IP Address: 8.8.8.8 DNS2 IP Address: 114.114.114.114 Save	on Settings
	System System Solution General System Maintenance System Maintenance System Maintenance Solution Solut	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114 114.114.114 Save	on Settings
	System System Levice Information Seneral System Maintenance System Maintenance User System Maintenance System Maintenance System Maintenance Levice System Maintenance Levice System Seneration Levice Settings	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 88.8.8 DNS2 IP Address: 114 114 114 114 Save	on Settings
	System System Social Enformation General General System Maintenance System Maintenance System Maintenance Social Enforcem Retwork Local Network Configuration Clinked Network Configuration Linked Network Configuration Advanced Settings	Remote Configuration	on Settings
	System System General System Maintenance System Maintenance System Maintenance Lear Network Local Network Configuration Linked Network Configuration Advanced Settings	Remote Configurat	on Settings
	System System System Solution	Remote Configurat	on Settings
	System System Levice Information Second System Maintenance System Maintenance System Maintenance System Maintenance System Maintenance System Maintenance System Maintenance Live System M	Remote Configurat Configuring the Advanced Network DNS1 IP Address: 88.8.8 DNS2 IP Address: 114.114.114.114 Save	on Settings
	System System System General System Maintenance System Maintenance System Maintenance Search	Remote Configuration	on Settings
	System System System General System Maintenance System Maintenance User Start R4885 Intercom Network Local Network Configuration Linked Network Configuration Advanced Setting:	Remote Configuration	on Settings
	System System System Information Second System Maintenance System Maintenance Sy	Remote Configuration	on Settings
	System System System Solution	Remote Configuring the Advanced Network DNS1 IP Address: 8.8.8 DNS2 IP Address: 114,114,114 Save	on Settings
	System System System General System Maintenance System Maintenance User System Maintenance User State Laterom Laterom Local Network Configuration Linked Network Configuration Advanced Settings	Remote Configuration	on Settings
	System System System Solution	Remote Configurat	on Settings
	System System System Second Se	Remote Configurat	on Settings
	System System System Solution	Configuring the Advanced Network DNS1IP Address: 8.8.8 DNS2IP Address: 114.114.114 Save	on Settings



2. Через графическое меню самого домофона, заходим в меню Настройки.

Нам нужна вкладка Конфигурация. Пароль по умолчанию 123456 либо 888999

Администрат	qq	Охр/снятие с	охр		D	Пароль
Пароль ад	цминистратора				F	Звук
Введите п раметров.	^{арол} Парол	ь администратора	×	іх па	0	Не беспок
PEKOME	НДУЕ			Ь	٢	Рабочий р
1. Измени	те па 🔑 Ввод	1 Пароль				Настройки
2. Измени	тепа				P	Техобслуж
3. Измени	те простои пароли	Þ.			*	Конфигура
4. Регуля	оно меняйте парол	16.			-	

Далее переходим в раздел Hik-Connect, где меняем адрес сервера на российский: **litedev.ezvizru.com** и перезагружаем домофон. После включения статус должен быть "Подключено". Запоминаем код подтверждения, он нам понадобится на этапе добавления устройства в облачный сервис.

Включить службу Hik-Connect	•		Локальн.инф
Сервер LBS	litedev.ezvizru.com		Сеть
Код подтверждения	PUDURF		Устройство
Состояние сервера Hik-Connect	Подключено		Настройки SI
			Время синхр.
		Îm	Восстановити
		25	Hik-Connect



На ряде устройств 1го поколения домофонов серий КН6ХХХ КН8ХХХ после обновления нет подключения к облачному сервису. Если вы все делаете по инструкции и статус остается «Выключен» то к сожалению, потребуется дождаться новой версии прошивки устройства.

3. Добавление устройства в личном кабинете Hik-Connect

HIKVISION °	English
	Welcome
	Account/Email Password
	Forgot Password
HIKVISIO	Register

Заходим используя существующие, или регистрируя новую учетную запись.

Добавляем устройство по серийному номеру

ŝ	Управление устро		Серийный номер устройства, Домен : Q Ф Добав			
равление устройством	Домен Устро	Серийный ном	IP/Номер порта.	Состоян	Операции устройс	
	446276665	446276665	85.114.6.18			
Другие устройства	501556053	501556053	85.114.6.18/80	Оффлайн	/ 🖞 🖻 🤫	
	Добавить устройство	•			/ 🖞 🖪 🤫	
	Серийный номе		Пои	іск	/ 🖬 🖻 🤫	
осмотреть мои общие видео				Отмена	/ 🖬 🖻 <	
	839308775	839308775	85.114.6.18/80	Оффлайн	/ 🖬 🖻 🤫	



Добавить устройство	
Серийный номе 575681	Поиск
6	
DS-KH8301-WT(575681:)	
	Отмена

И вводим код проверки, который мы видели в меню домофона. При успешном добавлении появится следующее окно.

Добавить устройство		
	O	
	Добавлено.	
*Имя:	DS-KH8301-WT(575681	
*Домен Устройства:	575681	\bigcirc
Серийный номер үст	575681	
Режим UPnP:	Авто Вручную	
Выберите автоматический р порта от устройства. Если эт	режим по умолчанию, и система ю не удастся, выберите ручной ј	получит номер режим.
Номер порта сервера:		
Номер порта НТТР:		
		Отмена



Поздравляем, устройство добавлено в вашу учетную запись.

Теперь при авторизации в мобильном приложении Hik-Connect будут поступать уведомления о вызовах.

Просмотр в Hik-connect

1)Скачиваем из Apple Store или Play Market приложение Hik-connect

2)После запуска приложения, нажимаем внизу кнопку Больше, после чего входим под своей учетной записью

2	ତ	4G ↓†	81% 1	3:48
	Больше			
\bigcirc	Снимки и видеозаписи			>
0	Настройки функций	2		>
?	Справка			>
ů	Сведения			>
		1		
	Вход	¢		
	1			
Hi	€ ⊡ k-Connect Сообщение		Больше	



С уважением, Hikvision Russia Support team.