Как добавлять QNAP NAS в камеры Hikvision

(1)добавлять пользователь

Нажмите кнопку Privilege Settings->Users->Create, чтобы создать

пользователь.

		~	C	
Users	User Groups	Shared Folders	Quota	Domain Security

		Create a User	
	User Description (optional)	User Group everyone	Edit
		Shared Folder Permission Read Only: Public Read/Write: Multimedia	Edit
Username:	Test		
Password:	12345	Application Privilege	Edit
	0-64 characters Too short	Unrestricted access to all applications	
Verify Password:	12345	Quota	Edit
	Show password	Enable / 1900GB	
Email (optional):			
Send a notification	mail to the newly created user		

(2) нажмите кнопку Shared Folders, чтобы настроить права чтения и

писания пользователей.



Нажмите кнопку **Create**, чтобы распределять общую папку пользователей.

Create A Shared Folder									
Please fill out the following fields to create a shared folder Folder Name: Test Description: Select the disk volume on which the shared folder will be created. Single Disk: Drive 1 Configure access privileges for users Currently, only administrators have the full permission on this folder.									
Advanced Settings Configure the settings of guest access	Advanced Settings Edit Configure the settings of guest access right, recycle bin, hidden folder, etc.								
Please fill out the following fields to create a shared folder Folder Name: Test Description: Select the disk volume on which the shared folder will be created. Single Disk: Drive 1									
Configure access privileges for	users			Close					
User name	Preview	RO	RW	Deny					
admin	Read/Write		V						
Test2	No Access								
Test	Read/Write								

SI	hared Folder Properties	8				
Network share name: Comment (optional): Disk Volume:	Test					
Path:	/Test 🗸					
 Hide network drive @ Lock File (Oplocks) Enable Network Recycle B Restrict the access of Recycle B 	 Hide network drive i Lock File (Oplocks) Enable Network Recycle Bin 					
 Enable write-only access of Only allows applications to 	 Restrict the access of Recycle bin to administrators only for now. Enable write-only access on FTP connection @ Only allows applications to access files using the long file name format. @ 					
	ОК	Cancel				

(3) нажмите Quota, чтобы настроить квоту пользователей.



Generate Edit Download		Local Users	ب
Users	Quota Size	Used size	Status
admin	No Limit		
Test2	1900 GB	3.647 GB	Available 1896.353 GB
Test	1800 GB	0 MB	Available 1800 GB
guest	19 GB	0 MB	Available 19 GB

Выберите Test, потом нажмите кнопку Edit, чтобы настроить квоту

пользователей.

Внимание: ёмкость квоты не должно превышать максимальную ёмкость жесткого диска.

Quota	8
 No Limit Set user's quota limitation 	
	OK Cancel

Нажмите кнопку System settings->Storage Manager, чтобы смотреть

текущую максимальную ёмкость жесткого диска.

Disk	Model	Capacity		Status	SMART Information
Drive 1	rive 1 Seagate ST2000DM001-10		CH1CC27 1863.02 GB		Good
Disk / Volume		File System	Total Size	Free Size	Status

(4)после настройки NAS, можно вводить в камеру Hikvision, чтобы

добавлять пользователь NAS в камеру.

💀 Local Configuration 🛛 🔺	Record Schedul	le Storage Management	NAS Snapshot		
Local Configuration					
Basic Configuration •	HDD No.	Туре	Server Address	File Path	
Advanced Configuration	1	NAS	10.18.0.11	/Test	
System	Mounting Ty	ype SWB/CIFS - Us	er Name Test	Password	Test
Network	2	NAS			
Video/Audio	3	NAS			
Image	4	NAS			
Security	5	NAS			
Events	6	NAS			
Storage	7	NAS			
	8	NAS			

Нажмите кнопку **Test**, если показается информация 'Testing succeeded' потом нажмите кнорку 'Save' для хранения.



Потом инициализировать жесткий диск для NAS, после инициализации можно нормально записывать.

Record Schedule Storage Management NAS Snapshot HDD Device List Format Status Property Progress HDD No. Capacity Free space Туре R/W 1832.31GB 0.00GB Uninitialized NAS V 9

HDD Device List							
HDD No.	Capacity	Free space	Status	Туре	Property	Progress	
9	1832.31GB	0.00GB	Uninitialized	NAS	R/W	25%	

Re	cord Schedule	Storage Mana	gement	NAS	Snapshot			
	HDD Device L	ist						Format
	HDD No.	Capacity	Free spac	e	Status	Туре	Property	Progress
	9	1832.31GB	1759.250	ЭB	Normal	NAS	R/W	