

Title:	How to Configure Abnormal Temp Event Linkage Pop-up in 4200	Version:	v1.0	Date:	06/29/2020
Product:	Access Control Devices			Page:	1 of 6


Preparation

1. Face Recognition Terminal DS-K1T671TM-3XF / DS-K1TA70MI-T /DS-K5604A-3XF v2.2.6 build0527
2. iVMS4200 v3.3.0.7 or later version

How to Configure Abnormal Temp Event Linkage Pop-up in 4200

When Temperature Face Recognition Terminal add to 4200, if you need linkage the event (Abnormal Temp or No Mask) to Pop-up, you can follow the steps.



1. Open Event Configuration.

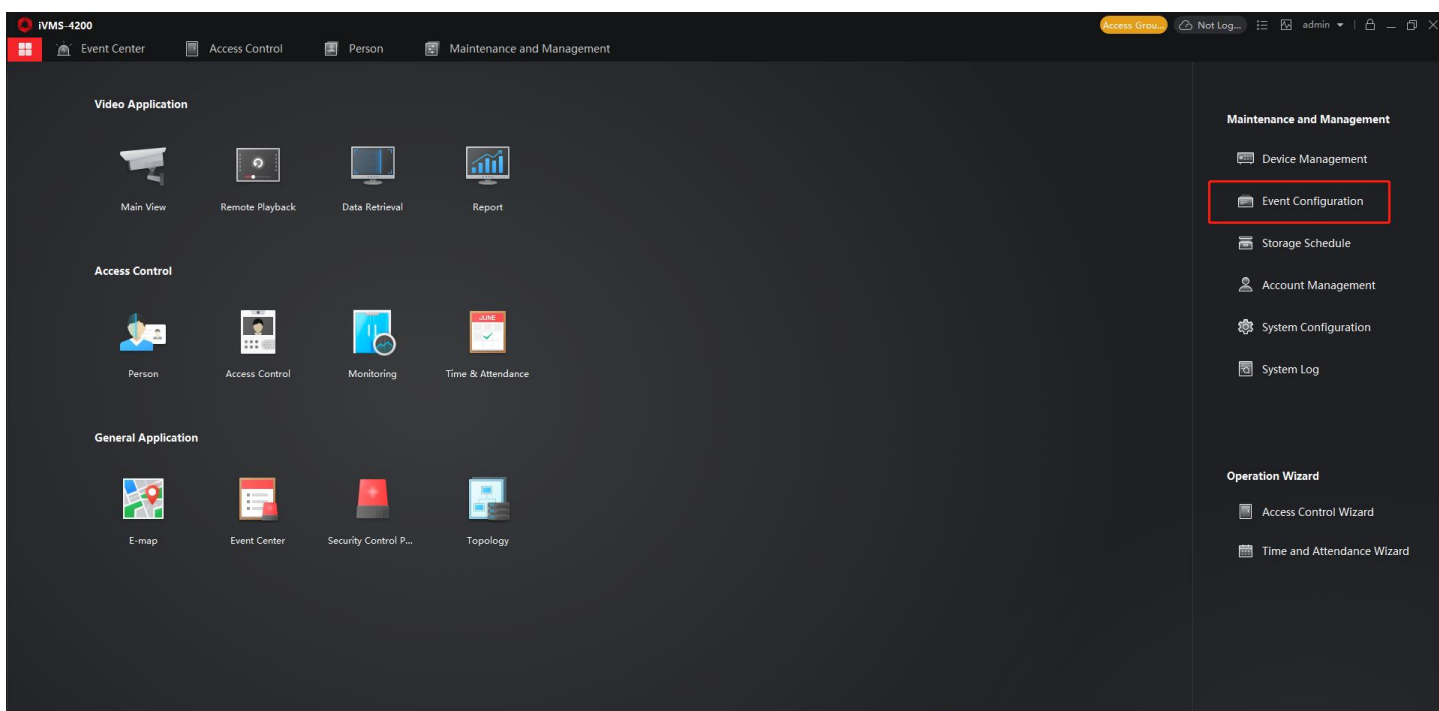

2. Configure Event Configuration

- 1) Select **Access Event**.
- 2) Select the device name you need configured.
- 3) Select the **Abnormal Temperature** event
- 4) Click the **Edit Linkage** function
- 5) Enable the **Triggered Pop-up Window** and select the camera.
- 6) Click save.



Title:	How to Configure Abnormal Temp Event Linkage Pop-up in 4200	Version:	v1.0	Date:	06/29/2020
Product:	Access Control Devices			Page:	2 of 6

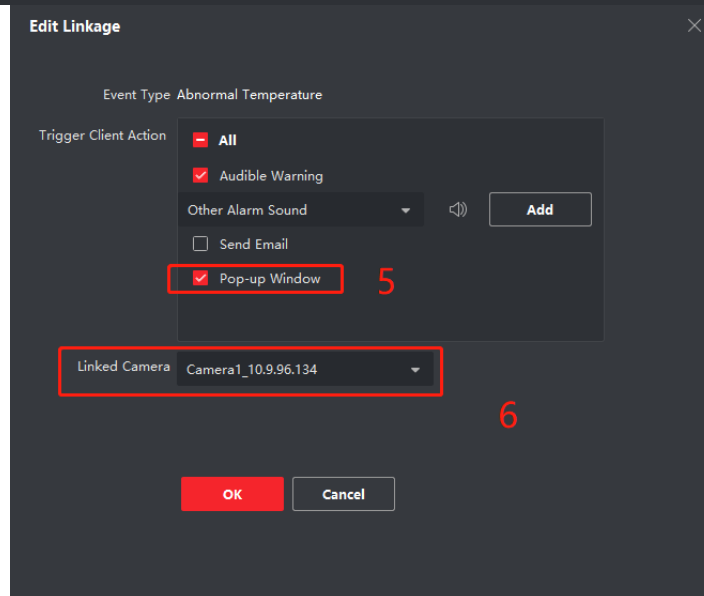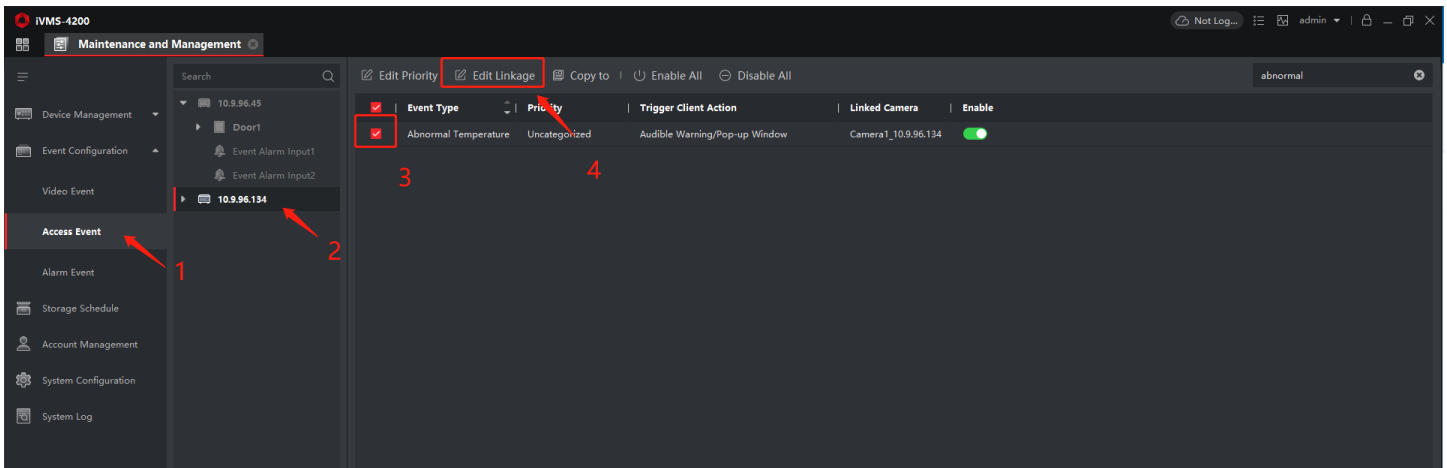

3. Result shows

- 1) Open Event Center—Real-time Event.
- 2) Enable Alarm triggered Pop-out Image
- 3) Simulated high temperature, then you can see the window pop-up (including event and picture)

Title:	How to Configure Abnormal Temp Event Linkage Pop-up in 4200	Version:	v1.0	Date:	06/29/2020
Product:	Access Control Devices			Page:	3 of 6

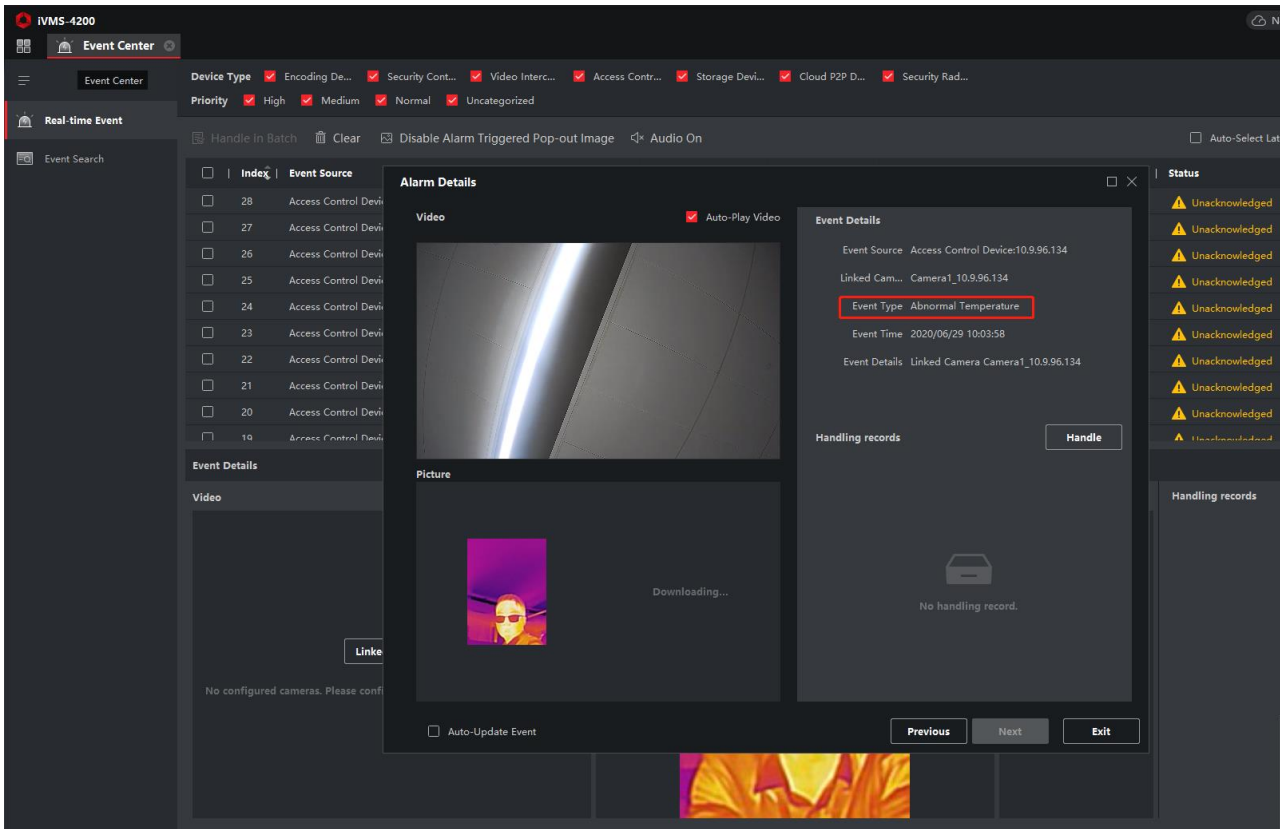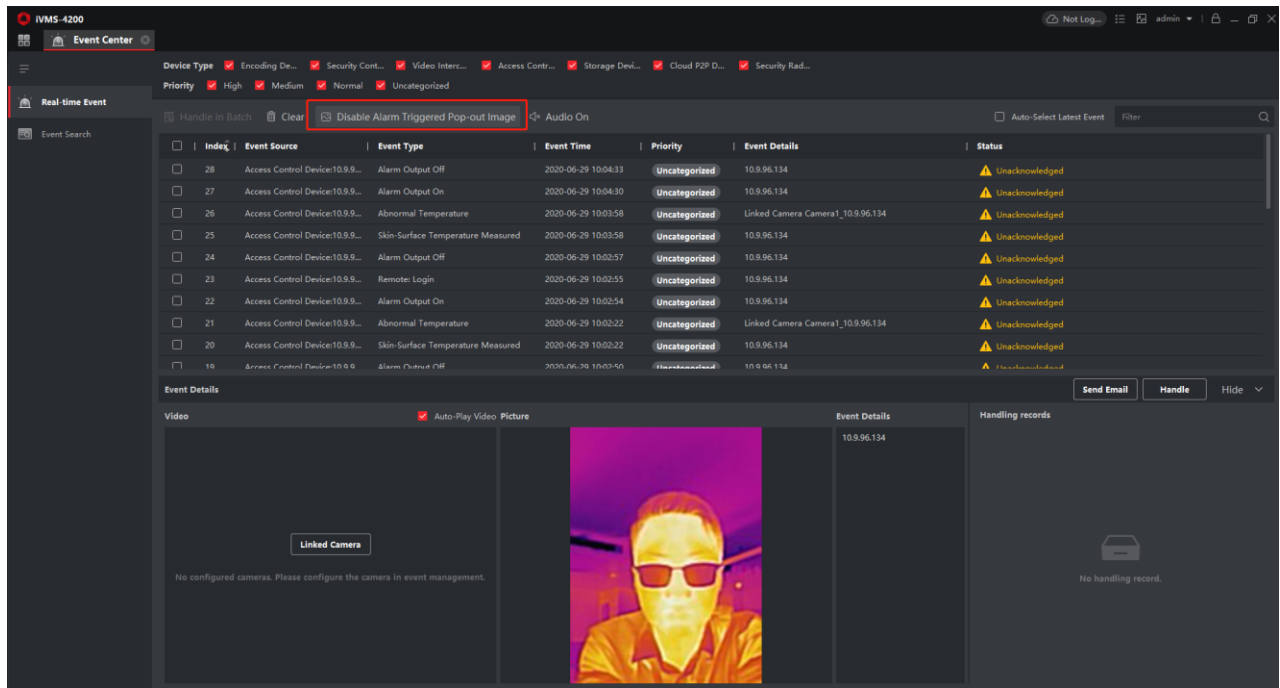



Title:	How to Configure Abnormal Temp Event Linkage Pop-up in 4200	Version:	v1.0	Date:	06/29/2020
Product:	Access Control Devices			Page:	4 of 6

First Choice for Security Professionals
HIKVISION Technical Support